

# MEASUREMENT GUIDE FOR BLINDS

**Showroom**  
22A Liddiard Street  
Hawthorn VIC 3122

**p** +613 9819 1484  
**m** +614 0284 1310  
**f** +613 8677 1179

## What will you need?

1. Tape measure (metal ones are best)
2. Pen and paper or Arrow order form
3. All measurements to be in Millimeters (mm)

## Face Fit or Recess Fit?

**Face Fit** - This is when you want the blind to hang outside the window recess or on the window frame.

**Recess fit** - This is when you want the blind to fit inside the window recess/Frame.

### Handy Hints


When measuring, always look out for things like window handles or tiles and take their position into account if necessary. This is so you can be sure of the perfect fit.

All our blinds can be fitted into the face of your window frame or wall, or into the top of the ceiling. This gives you complete control over the positioning of your blind.

## 6 SIMPLE STEPS TO RECESS FIT

Follow these instructions if you want the blind to hang inside the window recess or Window Frame:

1. Measure the width of the recess from inside the frame. Note down the shortest measurement.
2. Measure the drop of the recess to the windowsill. Note down the shortest measurement
3. Please note if there is a handle that can prompt the drop of the Blind, than use the face fit option.
4. Control for the blind can be right or Left. While facing the window determine which side you would like to have the control operation and note it on the order form.
5. Double check all the measurements and note it down in Arrow Order Form.
6. If you miss something or are unable to understand please feel free to give us a call or ask for a measuring rep to come in. Call out charges \$50 for Melbourne Metro

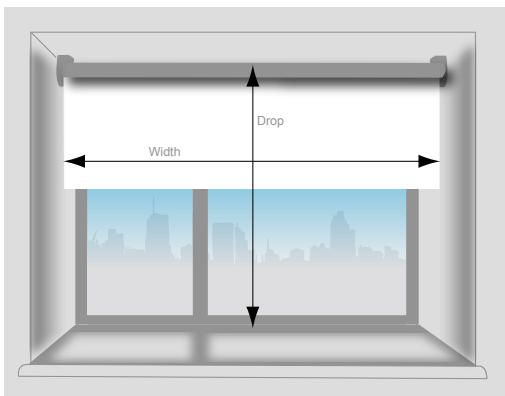

## Standard Allowance

In order for your blind to hang properly we do standard reductions in your measurements. Customers are requested NOT to deduct any allowance as it will be done at manufacturing end.

## Recess fit Blinds:

**Width:** 5 mm

**Drop:** 10 mm

## 5 SIMPLE STEPS TO A FACE FIT

For all types of blinds follow these instructions if you want your blind to hang outside the window recess or Frame:

1. Measure the exact width from one end of the frame to the other end. Note the measurement on Arrow order form
2. Measure the exact drop from the top of the frame to the bottom where the frame ends. Note the measurement on Arrow order form
3. Control for the blind can be right or left. While facing the window determine which side you would like to have the control operation and note it on Arrow order form.
4. Double check all the measurements and note it down in Arrow order form.
5. If you miss something or are unable to understand please feel free to give us a call on 03 - 9819 1484.

**Please note:** If you are not confident of your measurements, you can book in a measuring representative who would come in and do the measurements for you. Call out charges \$50 applicable in Melbourne metro (covering all suburbs till Pakenham, Frankston, Werribee, Craigeburn from Central Business District)

